


Mobile Phone Mount Instructions


Initial set up only. Once this is completed you will not need to perform this again unless changing devices.



1. Loosen the device clamping knob approximately half way out.

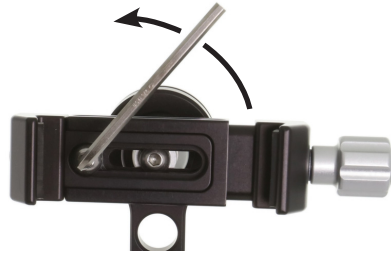

2. Take the included 1/8 hex wrench and loosen the button head screw on the mobile device clamp.

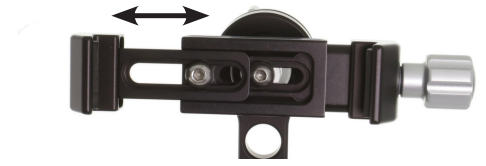

3. Extend the moveable jaw out.




4. Place your device into the clamp and slide the moveable jaw back against the side of your device (this is to set the width for your device).



5. Remove your device from the clamp and retighten the button head screw in place.

WARNING:
DO NOT OVERTIGHTEN
clamp locking knob. This could
cause damage to your device.

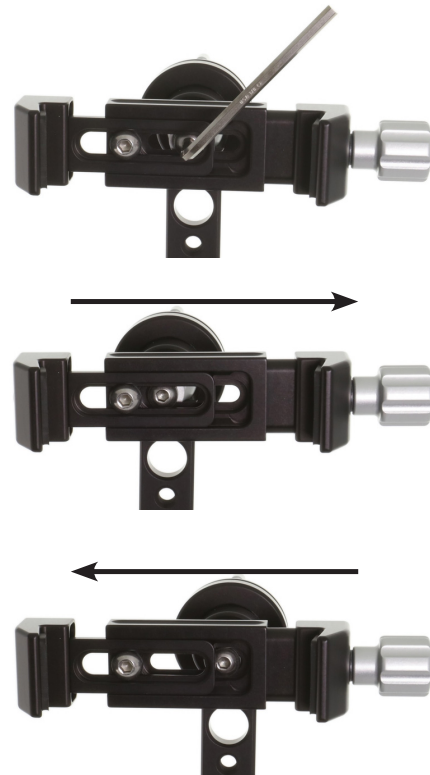

6. If you find your device is not centered to your liking, simply loosen the center button head screw and slide the device clamp to the right or left to your desired position and retighten the screw.